

Health & Safety

During the installation of any Watson Bowman Acme product, appropriate personal protective items should be worn at all times, including but not limited to the following:

- Proper work clothing
- Safety glasses
- Safety boots
- Gloves
- Hard hat



Local rules and regulations regarding safe work environments and health should be followed.

Product Components

The following components are required for the installation of this product:



Wabo® Paste Adhesive Package
(P/N – 2800J)



Wabo® Conditioning Agent
(P/N – 2802J)




*Aron Alpha 241 Glue
(P/N – 2876J)



Wabo® Concrete Cleaner
(P/N – 2731J)

*Optional components for splice procedures. Place order for required quantities.

1. Cut ends of seal with a sharp knife and miter box at a 45° angle. Ensure that cuts are clean and straight.
2. Apply Aron Alpha 241 glue to both seal ends to be joined.
3. Applying pressure, bringing the two surfaces into tight contact immediately after adhesive is applied. Hold in place for one to two minutes for initial bond.
4. Recheck quality of all splices/miters and apply glue as required.
5. To achieve proper working strength, handle with care as it takes 24 hours for glue to fully cure.

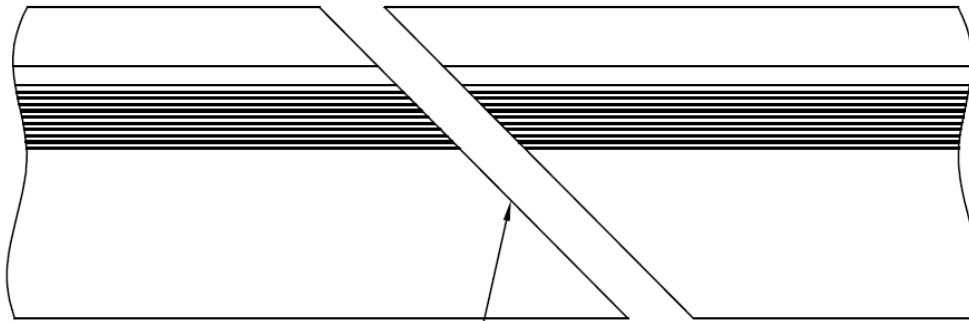

Surface to be spliced. —
Note: Make sure that profiles
match to ensure good adhesion.



*Aron Alpha 241 Glue
(P/N – 2876J)

*Watson Bowman Acme is your Strongest Partner for Expansion Joint Systems & Responsible Solutions.
Follow us on social media for industry news, new product announcements & more:*

