


SpeedFlex®


TTG

INSTALLATION INSTRUCTIONS


SpeedFlex® Track Top Gasket for J-Runners  
(Part Numbers: TTG250J, TTG400J, TTG600J)

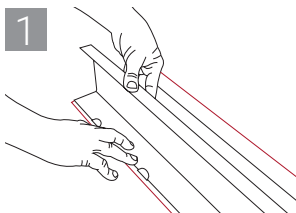


1  
Bend scored edges of TTG to conform to J-track profile with printed side facing out. Place TTG on end of J Track as shown. Punched tabs to overlap long leg of track.

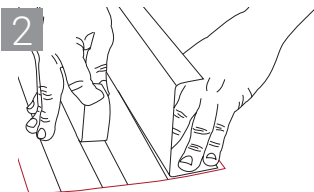


2  
Optionally, secure TTG to the center of the top of J-track with integral peel and stick adhesive strip.

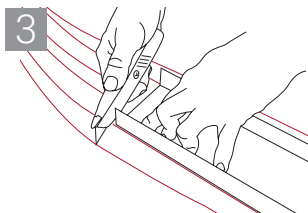

3  
Lay track flat and out TTG along other end of track.

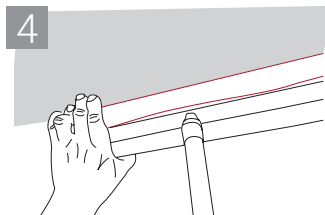

4  
Fasten track to floor/ceiling in the normal manner.

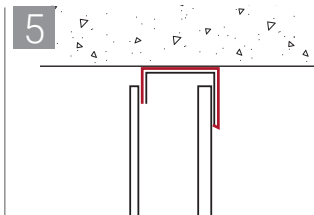

5  
Verify that downward projecting flaps are sandwiched between gypsum board and track.

Note: For more information on firestop installation, refer to ASTM E3157.

Page 1 of 1

Warranty: [www.stifirestop.com/legal/warranty](http://www.stifirestop.com/legal/warranty)  
Made in USA • Printed in USA  
ZIS1077 3579

