


# SOPRASEAL® STICK VP WALL SYSTEMS

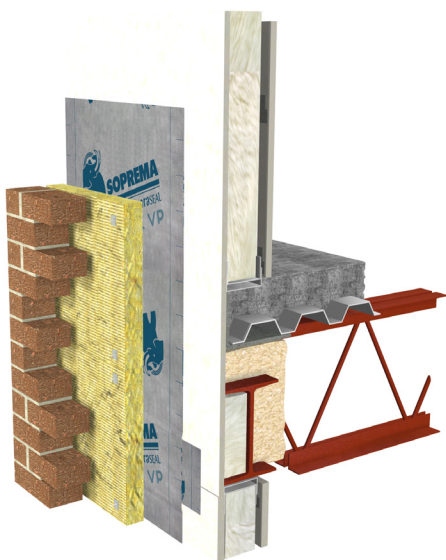

## VAPOR PERMEABLE AIR BARRIER MEMBRANE



SOPRASEAL® Stick VP is a self-adhered vapor-permeable air barrier membrane used in wall construction. SOPRASEAL Stick VP is composed of a tri-laminate polypropylene composite facer coated with a high tack self-adhesive backing protected by a silicone release film. The self-adhesive properties of SOPRASEAL Stick VP are unmatched in the industry, and the roll size combined with high tack adhesive make it very easy to install.

- Superior adhesive properties compared to competitive products
- Primer is not typically required
- UV exposure up to 180 days
- Self-sealing membrane ensuring a continuous air barrier; no moisture infiltration

### SURFACE PREPARATION

The substrate must be clean, sound, free of excess water and loose materials, grease and any contaminants that may compromise the performance of the product.

### RELATED PRODUCTS

#### 12-INCH NEOPRENE ROLLER

Maximizes SOPRASEAL STICK VP membrane adhesion

#### SOPRASEAL SEALANT

Moisture curing, STPE elastomeric sealant used to seal wall details

SOPRASEAL STICK VP	
THICKNESS	24 mil (0.6 mm)
DIMENSIONS	37 in x 98 ft (0.95 x 30 m)
SURFACE	Tri-laminate polypropylene composite
BACK SURFACE	Self-adhesive, covered with a silicone release film
WATER VAPOR PERMEANCE (ASTM E96 - METHOD B)	17.1 perm



## INSTALLATION INSTRUCTIONS

1



Peel off the top portion of the silicone release film and adhere the membrane to the substrate, making sure the membrane is well aligned.

2



Gradually peel off the remaining silicone release film, making sure the membrane adheres completely to avoid air pockets and wrinkles.

3



Use a roller to apply pressure over the entire surface of the membrane to ensure uniform adhesion to substrate.

4



Use a compatible sealant to seal around details, reverse laps and critical areas.

If you have any questions about this product or its installation, please contact your SOPREMA representative.



SOPREMA.US • 1.800.356.3521

SOPREMA.CA • 877.MAMMOUTH